



Ref No	Part No	Description
1A	UT5766-01A	Motor Housing
2	UT5766-02	Deflector
3	UT5766-03	Tap Screw (2)
4	UT5766-04	Inlet Bushing
5	UT5766-05	Regulator Set
6	UT5766-06	Ball Bearing (3)
7	UT5766-07	F-Bearing Case
8	UT5766-08	Rotor Blade (5)
9	UT5766-09	Rotor
10	UT5766-10	Cylinder
11	UT5766-11	B-Bearing Case
12	UT5766-12	Ball Bearing
13	UT5766-13	O-Ring
14A	UT5766-14	Motor Nut
15	UT5766-15	Spring
16	UT5766-16	O-Ring
17	UT5766-17	Valve Stem
18	UT5766-18	O-Ring
19	UT5766-19	O-Ring
20	UT5766-20	Valve Pin Sleeve
21	UT5766-21	Spring Pin
22	UT5766-22	Valve Lever
23	UT5766-23	Snap Ring (2)
24	UT5766-24	Lever Roller
25	UT5766-25	Lever Shaft
26	UT5766-26	Ball Bearing (2)
27	UT5766-27	Idler Roller
28	UT5766-28	Roller Shaft
29	UT5766-29	Spring Pin

Ref No	Part No	Description
30	UT5766-30	Cap Screw
31	UT5766-31	Spring Washer
32	UT5766-32	Driver Shaft
33	UT5766-33	Snap Ring
34	UT5766-34	Driver Roller
35	UT5766-35	Spring Washer (2)
36	UT5766-36	Cap Screw
37A	UT5766-37A	Frame
38	UT5766-38	Spacer
39A	UT5766-39A	Guide
40	UT5766-40	Knob (2)
41	UT5766-41	Washer (2)
42	UT5766-42	Needle Pin
43	UT5766-43	Pulley
44	UT5766-44	Washer (2)
45	UT5766-45	Nut
46	UT5766-46	Belt
47	UT5766-47	Belt Cover
48	UT5766-48	Pulley
49	UT5766-49	Set Screw (2)
50	UT5766-50	Nut
51	UT5766-51	Washer
52	UT5766-52	Wheel Cover
53	UT5766-53	Screw (3)
54	UT5766-54	Spring Washer (3)
55	UT5766-55	Washer (3)
57	UT5766-57	Hex Wrench (2.5mm)
58	UT5766-58	Hex Wrench (5mm)
70	UT5766-70	Spring Washer